



VITEK

ENGLISH

ELECTRIC KETTLE VT-7083

The liquid heating appliance (kettle) is intended for boiling drinking water only.

DESCRIPTION

1. Kettle flask
2. Kettle spout
3. Mesh filter
4. Lid
5. ON/OFF button (0/1)
6. Handle
7. Water level scale
8. Flask lighting
9. Base
10. Cord storage

NOTES:

- Before using the kettle, make sure that the on/off button (5) is not blocked by any foreign objects, the anti-scale filter (3) is installed and the lid (4) is closed tightly.

• Once water starts boiling, the kettle will be switched off automatically and the flask lighting (8) will go out.

• Pour water out and repeat the water boiling procedure 2-3 times.

NOTES:

• Before using the kettle, make sure that the on/off button (5) is not blocked by any foreign objects, the anti-scale filter (3) is installed and the lid (4) is closed tightly, otherwise the auto switch off of the kettle is not possible.

• Before removing the kettle from the base, make sure that the kettle is turned off (the on/off button (5) is in the position «0»).

ATTENTION!

For additional protection it is reasonable to install a residual current device (RCD) with nominal operation current not exceeding 30 mA, to install RCD, contact a specialist.

ATTENTION!

To avoid burns by hot steam, do not bend over the kettle spout (2) while it is operating.

SAFETY MEASURES

Before using the unit, read this manual carefully and keep it for future reference.

Use the unit for intended purposes only, as specified in this manual. Mishandling the unit can lead to its breakage and cause harm to the user or damage to his/her property.

- Use the unit for its intended purpose only and in strict accordance with the instruction manual.

• Make sure that your home mains voltage corresponds to the voltage specified on the unit body.

• The power cord is equipped with a «eurolug», plug it into the socket with a reliable grounding contact.

• To avoid the risk of fire, do not use adapters for connecting the kettle.

• Once water starts boiling, the kettle will be switched off automatically and the flask lighting (8) will go out.

• Do not use the kettle in bathrooms. Do not use it near swimming pools or other containers filled with water.

• Do not use the kettle near heat sources or open flame.

• Do not use the unit in places where aerosols are sprayed or highly flammable liquids are used.

• Do not use the kettle outdoors.

• Do not leave the operating kettle unattended.

• Place the kettle on a flat stable surface; do not place the kettle on the edge of the table.

• Do not direct the kettle spout at wooden furniture, electrical appliances, books and objects which can be damaged by moisture, hot steam.

• Before switching the kettle on, make sure that it is placed on the base evenly.

• Use only the base supplied with the unit.

• Do not let the power cord hang from the edge of the table and make sure that the power cord does not touch the sharp edges of furniture. You can adjust the power cord length by winding it around the base.

• Insert the power plug into the mains socket.

• Once water starts boiling, the kettle will be switched off automatically and the flask lighting (8) will go out.

• Do not use the kettle in bathrooms. Do not use it near swimming pools or other containers filled with water.

• When removing the kettle from the base (9), make sure that it is switched off (the button (5) is in the «0» position).

• After switching the kettle off, wait for 10-20 seconds, then you can switch it on again for re-boiling.

• If you accidentally switch the kettle on, but the water level appears to be below the minimal mark (MIN), the automatic thermal switch will be on and the kettle will be switched off automatically. In this case take the kettle from the base (9), let it cool down for 10-15 minutes, then fill it with water and switch it on, the kettle will operate in normal mode.

Note:

- There is a cord storage (10) on the reverse side of the base (9). You can adjust the optimal power cord length by folding it in the cord storage in a corresponding way.

CLEANING AND MAINTENANCE

• Before cleaning disconnect the unit from the mains, pour out water and let the kettle cool down.

• Wipe the outer surface of kettle (1) with a slightly damp cloth or a sponge. Use soft detergents to remove dirt; do not use metal brushes and abrasive detergents.

• Do not fill the kettle with water when it is standing on the base.

• Do not use the kettle if the lid is not closed tightly or without the anti-scale filter.

• Take the kettle off the base before opening the lid.

• Use the kettle only for boiling drinking water, do not heat or boil any other liquids.

• Ensure that the water level in the kettle is not below the minimal mark «MIN» and not above the maximal mark «MAX». If the water level exceeds the maximal mark, boiling water can splash out of the kettle during boiling.

• To avoid burns by hot steam, do not bend over the kettle spout while it is operating.

• Do not open the kettle lid while water is boiling.

• Do not touch the base exchange side of the kettle, take it only by the handle.

• Be careful when removing the kettle filled with boiling water.

• Do not remove the operating kettle from the base. If you need to take the kettle off, switch it off first, setting the on/off button to the position «0» and then remove it from the base.

• Be careful when you pour water out of the kettle, do not tilt the kettle sharply and at more than 45°, in case of careless use water may splash and cause harm to the user or their property.

• Unplug the kettle base before cleaning and when you are not using the kettle. Never pull the power cord when disconnecting the base from the mains; take the power plug and carefully remove it from the mains socket.

• To avoid electric shock, do not immerse the unit and the base into water or any other liquids.

• Do not wash the kettle and the base in a dishwashing machine.

• This unit is not intended for usage by children.

• Place the unit out of reach of children during the operation and cooling down period.

• Do not allow children to touch the unit body and the power cord during the operation.

• The unit is not intended for usage by physically or mentally disabled persons (including children) or by persons lacking experience or knowledge if they are not under supervision of a person who is responsible for their safety or if they are not instructed by this person on the usage of the unit.

• Do not leave children unattended to prevent using the unit as a toy.

• For children safety reasons do not leave polyethylene bags, used as packaging, unattended.

ATTENTION! Do not allow children to play with polyethylene bags or packing film. **Danger of suffocation!**

• Check the power cord, the power plug and the kettle body integrity periodically.

• Never use the kettle if the power cord or the power plug is damaged.

• Do not attempt to repair the unit. Do not disassemble the unit by yourself, if any malfunctions is detected or after it was dropped, plug the unit and apply to any authorized service center from the contact address list given in the warranty certificate and on the website www.vitek.ru.

• Transport the unit in the original package only.

• Keep the unit out of reach of children and disabled persons.

DELIVERY SET

Electric kettle - 1 pc.

Base - 1 pc.

Instruction manual - 1 pc.

TECHNICAL SPECIFICATIONS

Power supply: 220-240 V ~ 50 Hz

Rated input power: 1850-2200 W

Maximum water capacity: 1.7 L

ATTENTION! Do not allow children to play with polyethylene bags or packing film. **Danger of suffocation!**

• Check the power cord, the power plug and the kettle body integrity periodically.

• Never use the kettle if the power cord or the power plug is damaged.

• Do not attempt to repair the unit. Do not disassemble the unit by yourself, if any malfunctions is detected or after it was dropped, plug the unit and apply to any authorized service center from the contact address list given in the warranty certificate and on the website www.vitek.ru.

• Transport the unit in the original package only.

• Keep the unit out of reach of children and disabled persons.

THE UNIT IS INTENDED FOR HOUSEHOLD USE ONLY. ITS COMMERCIAL USAGE AND USAGE IN PRODUCTION AREAS AND WORK SPACES IS PROHIBITED.

BEFORE THE FIRST USE

After unit transportation or storage at low temperature keep it for at least three hours at room temperature before switching on.

There may be water spots in the kettle, this is normal, as the unit has undergone factory quality control.

• Open the kettle and remove any advertising stickers that can prevent the unit operation.

• Check the unit for damages; do not use it in case of damages.

• Make sure that the unit operating voltage corresponds to the voltage of your mains.

• Make sure that the unit is switched off (the on/off button (5) is in the «0» position).

• Insert the power plug into the mains socket.

The unit operating life is 3 years

RECYCLING

For environmental protection do not throw out the unit and the batteries (if included), do not discard the unit and the batteries with usual household waste after the service life expiration; apply to specialized centers for further recycling.

The waste generated during the disposal of the unit is subject to mandatory collection and consequent disposal in the prescribed manner.

For further information about recycling of this product apply to a local municipal administration, a disposal service or to the shop where you purchased this product.

U **THE UNIT IS INTENDED FOR HOUSEHOLD USE ONLY. ITS COMMERCIAL USAGE AND USAGE IN PRODUCTION AREAS AND WORK SPACES IS PROHIBITED.**

BEFORE THE FIRST USE

After unit transportation or storage at low temperature keep it for at least three hours at room temperature before switching on.

There may be water spots in the kettle, this is normal, as the unit has undergone factory quality control.

• Open the kettle and remove any advertising stickers that can prevent the unit operation.

• Check the unit for damages; do not use it in case of damages.

• Make sure that the unit operating voltage corresponds to the voltage of your mains.

• Make sure that the unit is switched off (the on/off button (5) is in the «0» position).

• Insert the power plug into the mains socket.

The unit operating life is 3 years

RECYCLING

For environmental protection do not throw out the unit and the batteries (if included), do not discard the unit and the batteries with usual household waste after the service life expiration; apply to specialized centers for further recycling.

The waste generated during the disposal of the unit is subject to mandatory collection and consequent disposal in the prescribed manner.

For further information about recycling of this product apply to a local municipal administration, a disposal service or to the shop where you purchased this product.

U **THE UNIT IS INTENDED FOR HOUSEHOLD USE ONLY. ITS COMMERCIAL USAGE AND USAGE IN PRODUCTION AREAS AND WORK SPACES IS PROHIBITED.**

BEFORE THE FIRST USE

After unit transportation or storage at low temperature keep it for at least three hours at room temperature before switching on.

There may be water spots in the kettle, this is normal, as the unit has undergone factory quality control.

• Open the kettle and remove any advertising stickers that can prevent the unit operation.

• Check the unit for damages; do not use it in case of damages.

• Make sure that the unit operating voltage corresponds to the voltage of your mains.

• Make sure that the unit is switched off (the on/off button (5) is in the «0» position).

• Insert the power plug into the mains socket.

The unit operating life is 3 years

RECYCLING

For environmental protection do not throw out the unit and the batteries (if included), do not discard the unit and the batteries with usual household waste after the service life expiration; apply to specialized centers for further recycling.

The waste generated during the disposal of the unit is subject to mandatory collection and consequent disposal in the prescribed manner.

For further information about recycling of this product apply to a local municipal administration, a disposal service or to the shop where you purchased this product.

U **THE UNIT IS INTENDED FOR HOUSEHOLD USE ONLY. ITS COMMERCIAL USAGE AND USAGE IN PRODUCTION AREAS AND WORK SPACES IS PROHIBITED.**

BEFORE THE FIRST USE

After unit transportation or storage at low temperature keep it for at least three hours at room temperature before switching on.

There may be water spots in the kettle, this is normal, as the unit has undergone factory quality control.

• Open the kettle and remove any advertising stickers that can prevent the unit operation.

• Check the unit for damages; do not use it in case of damages.

• Make sure that the unit operating voltage corresponds to the voltage of your mains.

• Make sure that the unit is switched off (the on/off button (5) is in the «0» position).

