


ENGLISH

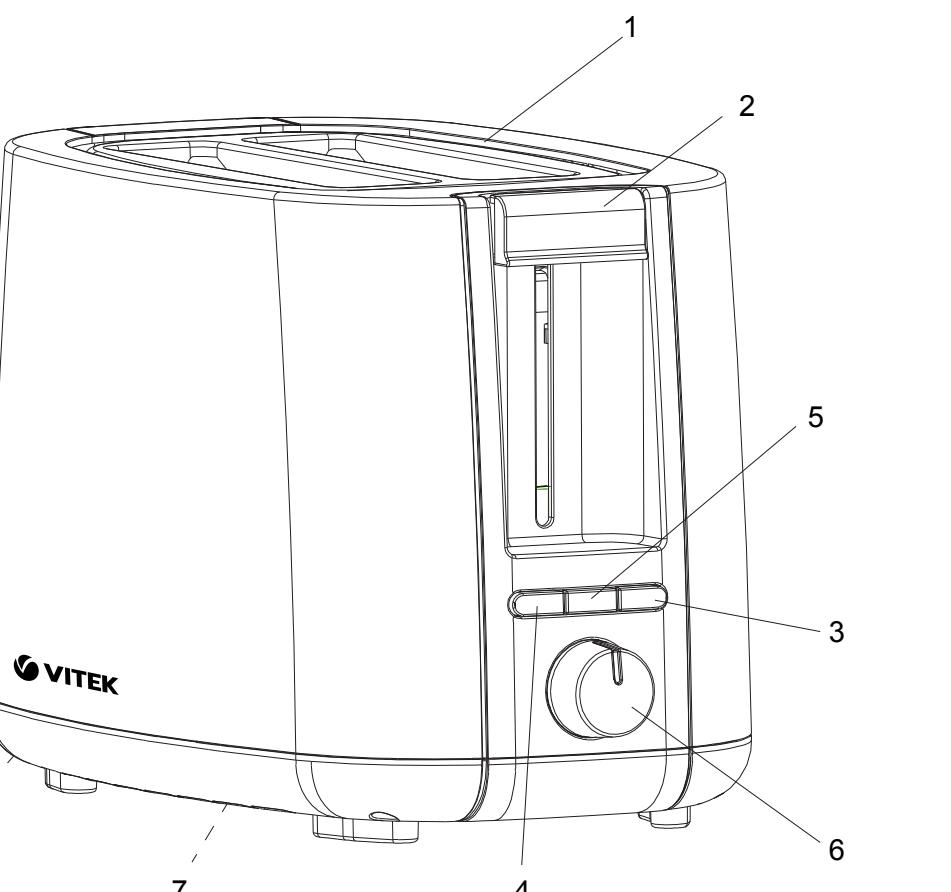

TOASTER VT-7170

The toaster is intended FOR BREAD TOASTING ONLY.

DESCRIPTION

- 1. Slots for bread toasting
- 2. Carriage control lever
- 3. «DEFROST» button
- 4. «REHEAT» button
- 5. «CANCEL» button
- 6. Toasting level control knob «1---7»
- 7. Cord storage
- 8. Crumb tray

ATTENTION!

For additional protection it is reasonable to install a residual current device (RCD) with nominal operation current not exceeding 30 mA into the mains of the kitchen; to install RCD, contact a specialist.

TIPS

The toasting level depends on the thickness of the bread slice, bread sort and quality. Never toast too thin or too thick slices, the thickness of the toast should not exceed 20 mm.

If the toasts are jammed in the slot, press the «CANCEL» button (5), unplug the toaster and let it cool down. Use a suitable wooden or plastic spatula to remove the toasts. Do not touch the heating elements to avoid damaging them.

MAKING TOASTS

Put one or two slices of bread into the slots for bread toasting (1). Insert the power plug into the mains socket.

Set the required toasting level using the knob (6): «1» - minimal toasting level;

«7» - maximal toasting level.

Note: Set the control knob (6) to the needed position.

Press the lever (2) until clamping.

When the toasts are ready, the unit will be switched off automatically, the carriage control lever (2) will return to its initial position.

Button (5) «CANCEL»

If you want to stop the toasting process, press the «CANCEL» button (5).

Button (4) «REHEAT»

You can heat up cold toasts. To do this, put the toasts into the slots for bread toasting (1) and press the carriage control lever (2) until it is locked. Press the «REHEAT» button (4), the button (4) illumination will light up. In this mode, you can heat up toasts without additional toasting.

Button (3) «DEFROST»

To toast frozen toasts, put them into the slots for bread toasting (1). Set the required toasting level with the control knob (6), press the carriage control lever (2) until it is locked and then press the «DEFROST» button (3); the button (3) illumination will light up.

CRUMB TRAY

The toaster is equipped with a crumb tray (8). Switch the unit off and let it cool down.

Remove the crumb tray (8), clean it off the crumbs and install the tray back to its place.

CLEANING AND CARE

Before cleaning the unit, make sure that it is unplugged. Wait until the toaster cools down completely.

Clean the outer surface of the toaster body with a damp cloth and then wipe it dry.

Do not use coarse sponges, abrasives and solvents to clean the toaster.

Remove and clean the crumb tray (8).

Do not immerse the unit, the power cord and the power plug into water or any other liquids.

If the unit is dropped into water:

- do not touch the water;

- unplug the unit immediately, only after that you may take the unit out of water;

- apply to an authorized service center for testing or repairing the unit.

• Do not use the toaster for toasting foods with too much sugar or filled with jam.

• Do not toast bread with butter.

• To avoid the risk of fire, do not put oversized food and food wrapped in metal foil into the toaster.

• Never cover the toaster when making toasts.

• Do not remove toasts during the unit operation.

• Do not touch hot surfaces of the toaster.

Attention! During cooking the toasts heat up. Be careful to avoid burns.

• Always switch the toasts off and unplug it after operation or before cleaning.

• Never pull the power cord when disconnecting the unit from the mains, take the power plug and carefully remove it from the mains socket.

• Before cleaning the toaster, make sure that it has cooled down.

• Clean the tray regularly. Provide that no crumbs accumulate on the tray.

• Do not use abrasives or solvents to clean the toaster.

• For children safety reasons do not leave polyethylene bags, used as packaging, unattended.

Attention! Do not allow children to play with polyethylene bags or packaging film. Danger of suffocation!

• Do not allow children to touch the unit body and the power cord during the unit operation.

• Do not leave children unattended to avoid them using the unit as a toy.

• Place the unit out of reach of children during the operation and cooling down.

• This unit is not intended for usage by children.

• The unit is not intended to be used by people with physical, sensory or mental disabilities (including children) or by persons lacking experience or knowledge if they are not under supervision of a person who is responsible for their safety or if they are not instructed by this person on the usage of the unit.

• Never use the unit if the power cord or the power plug is damaged, if the unit functions improperly or after it was dropped.

• If the power cord is damaged, it should be replaced by the manufacturer, a maintenance service or similar qualified personnel to avoid danger.

• Do not attempt to repair the unit. Do not disassemble the unit and the batteries (if included), do not discard the unit and the batteries with usual household waste after the service life expiration; apply to specialized centers for further recycling.

The waste generated during the disposal of the unit is subject to mandatory collection and consequent disposal in the prescribed manner.

For further information about recycling of this product apply to a local municipal administration, a disposal service or to the shop where you purchased this product.

Keep the unit out of reach of children and disabled persons.

This unit is intended FOR HOUSEHOLD USE ONLY. COMMERCIAL USAGE AND USAGE IN PRODUCTION AREAS AND WORK SPACES IS PROHIBITED.

WARNING

• Never try to jammed toasts out of the operating toaster with your hands or with a metal object, as contact of the metal object with the heating element under voltage may cause electric shock.

• Unplug the toaster from the mains, wait until it cools down and only after that remove the toasts carefully with a suitable wooden or plastic spatula.

• During the unit operation the surface temperature can be high. To avoid burns, keep your hands and other open parts of your body away from the metal parts of the toaster during the unit operation.

BEFORE THE FIRST USE

After unit transportation or storage under cold (winter) conditions, it is necessary to keep it for at least three hours at room temperature before switching on.

This product conforms to the EMC Directive 2014/30/EU and to the Low Voltage Directive 2014/35/EU.

