



EN ■ Milk frother and warmer

Translation of the original manual

READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use the product in a safe manner and understand the potential dangers.
- Cleaning and maintenance performed by the user must not be performed by children unless they are older than 8 years of age and under supervision. Keep the appliance and its power cord out of reach of children younger than 8 years of age.
- Children must not play with the appliance.
- Cleaning and maintenance performed by the user must not be performed by unsupervised children.
- In the event that the power cord is damaged, have it repaired at a professional service centre to prevent causing a dangerous situation. It is forbidden to use the appliance if it has a damaged power cord.



Warning:

Incorrect use may lead to injuries.

- Avoid coming into contact with moving parts such as the milk frothing attachment.
- Clean the milk kettle and milk frothing attachment according to the instructions provided in chapter "Cleaning and maintenance".
- Always disconnect the appliance from the power socket when leaving it without supervision, before assembly or disassembly, when not using it, before moving or cleaning it.
- Before replacing the accessories or accessible parts that move during use, turn the appliance off and disconnect it from the power supply.
- This appliance is designed for household use only. It is not intended for use in locations such as:
 - staff kitchens in stores, offices and other workplaces;

- agricultural farms;
- hotel or motel rooms and other living areas;
- bed and breakfast establishments.
- Take care not to spill anything on the connector when handling the appliance.
- The surface of the heating element and body of the appliance remains hot after use due to residual heat. Do not touch the hot surface.
- To prevent the risk of injury by electrical shock, do not submerge or expose the motor base unit, plug or power cord to water or any other liquid.
- Do not submerge the appliance in water or in any other liquid for the purpose of cleaning it.




Do not touch the hot surface. There is a danger of a burns.

- Before connecting the appliance to a power socket check that the nominal voltage matches the electrical voltage in the socket.
- Do not use the appliance if it has fallen or is damaged in any way. If the appliance is damaged, please contact an authorised service centre.
- To prevent the risk of injury by electrical shock, do not submerge or expose the motor base unit, plug or power cord to water or any other liquid.
- Do not submerge the appliance in water or in any other liquid for the purpose of cleaning it.
- Disconnect the appliance from the power socket by pulling on the plug, never pulling on the power cord. Otherwise, this could damage the power cord or the socket.
- Use only accessories supplied with the appliance or recommended by the manufacturer. Using accessories other than those supplied or recommended can result in injuries, a fire hazard or injury by electrical shock.
- The length of the power cord is designed so that it is not possible to trip over it or for it to tangle up.

- Do not leave the power cord hanging over the edge of a table or a work bench. Make sure that the power cord is positioned in such a way that it is not possible to pull on it or for it to tangle up.
- Prevent the power cord from touching hot surfaces and do not place it on or in the vicinity of gas burners, electric hotplates or ovens.
- Do not place the appliance on devices and equipment or devices that are sources of heat, or in their vicinity or in the vicinity of an open fire.
- Do not use the appliance outdoors.
- The appliance is intended for heating milk. Do not use it for any other purpose than for which it was designed.
- When filling the kettle with milk, always adhere to the minimum and maximum marks. Be careful when handling the hot contents of the kettle. Under no condition start the appliance without a liquid in the kettle.
- Do not move or otherwise handle the appliance by holding on to the power cord.
- Always place the appliance on a stable, even and dry surface. Do not place the appliance on a hot surface.
- After every use, check that the appliance is turned off using the On/Off button.
- To avoid the danger of injury by electrical shock, do not repair the appliance yourself or make any adjustments to it. Have all repairs or adjustments performed at an authorised service centre. By tampering with the appliance, you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.

A

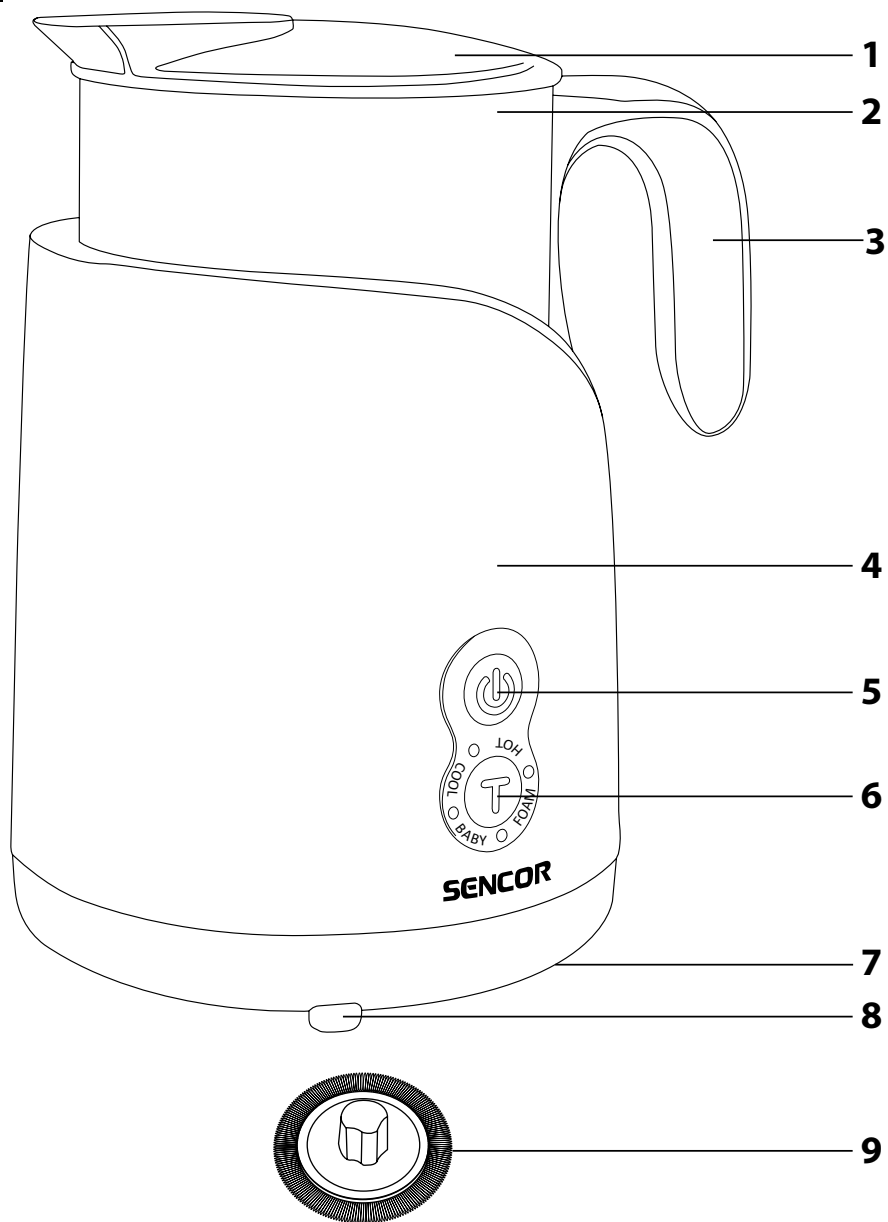

- Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use.
- We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

DESCRIPTION OF THE APPLIANCE

- A1** Lid with a practical spout
A2 Stainless steel kettle with minimum and maximum level marks
A3 Handle
A4 Frother base
A5 On/Off button
A6 Operating mode selection button
- A7** Storage space for the frothing attachment (located at the bottom of the base)
A8 Anti-slip feet
A9 Frothing attachment with removable spring

Before first use

- Before first use, take the appliance and its accessories out of the packaging material and remove all promotional labels and stickers. Check that neither the appliance nor any of its parts is damaged.
- Wash the kettle **A2**, lid **A1** and the frothing attachment **A9** in warm water with a small amount of kitchen detergent. Rinse with clean water and thoroughly wipe dry.
- Wipe the base **A4** using a soft sponge lightly dampened in warm water and then wipe dry with a clean wiping cloth.
- Before storing the frother, make sure that all its parts are clean and dry.

Warning:

Do not submerge the base **A4** in water or in any other liquid for the purpose of cleaning it.



Frothing attachment

The milk frother is equipped with a frothing attachment **A9**, which serves to both heat up the milk and to froth it up. The frothing attachment **A9** is equipped with a removable spring.

If you wish only to heat the milk, remove the spring from the frothing attachment **A9**. The movement of the frothing attachments **A9** in the kettle **A2** will ensure that the milk does not burn and stick to the bottom or walls of the kettle **A2**.

If on the other hand you wish to froth the milk up, it is important to put the spring on the frothing attachment **A9**. This will ensure a rich and creamy foam.

Warning:

Do not use the milk frother without the frothing attachment **A9** installed. This risks damaging the milk frother and ruining the milk.



USING THE MILK FROTHER

- Place the milk frother in an even, stable and dry place at a sufficient distance from the power socket.
- Remove the lid **A1** from the kettle **A2**.
- Put the frothing attachment **A9** on to the central connector in the kettle **A2**. Depending on the milk's intended use, install or remove the spring of the frothing attachment **A9** – more in section "Frothing attachment" or "Operating mode table".
- Pour milk into the kettle **A2**. Always adhere to the minimum and maximum level marks according to the selected mode.
- Put on the lid **A1**. Make sure that the lid is correctly seated on the kettle **A2**.



Note:

The lid **A1** is equipped with a practical spout that enables comfortable, safe pouring of hot milk. Likewise, it is possible to add ingredients through it, e.g. chocolate when preparing hot chocolate.

- Place the kettle **A2** into the base **A4**.
- Insert the plug into a power socket, and the operating mode selection button **A6** will be lit.
- Press button **A6** again to select the desired operating mode – see "Operating mode table". Each time the button is pressed the backlight colour of button **A6** will change.

- Press the On/Off button **A5**, the button will be lit red and the milk frother will start.
- When the milk is warmed up, the backlight button **A5** will turn off and the milk frother will stop automatically.
- Disconnect the power plug from the power socket, take the kettle out of the base **A4** and prepare your favourite drink.



Note:

If you want a richly frothy milk with a creamy foam, we recommend that you use cool half-cream milk. Also, before use, you can rinse out the kettle **A2** with cool water and wipe it dry or put it into a refrigerator.

Operating mode table

Operating mode	Backlight	Max. amount	Attachment	Recommendations
COOL	Blue	150 ml	Attachment with spring	Frothing milk without heating Suitable for making ice coffee, frappé, etc.
BABY	Green	300 ml	Attachment without spring	Heat milk to a temperature suitable for infants and small children
FOAM	Violet	150 ml	Attachment with spring	Frothing and heating milk Suitable for making cappuccino, latté, etc.
HOT	Red	300 ml	Attachment without spring	Milk heated to maximum temperature (approx. 68 °C) Suitable for making hot cocoa or chocolate.

Automatic shut-off

The milk frother will automatically turn off after about 10 minutes of inactivity. When you wish to use the milk frother, put on the kettle and use button **A6** to select an operating mode. When button **A6** is lit, the milk frother is turned on again.

Overheating protection

The milk frother is equipped with a safety thermal fuse that protects it against damage caused by the overheating of the milk frother. In the event that such a situation occurs, the fuse will be triggered and the operation of the milk frother will be stopped. If this happens, disconnect the power plug from the power socket and allow the milk frother to cool down. Then connect the power plug back into the power socket and you will be able to use the milk frother again.

CLEANING AND MAINTENANCE

Disconnect the power plug from the power socket and allow the appliance to cool down before cleaning it.

For cleaning, do not use cleaning products with an abrasive effect, solvents, etc. that could damage the surface of the appliance. No part of this appliance is intended for washing in a dishwasher.

Warning:

To prevent the risk of injury by electrical shock, do not submerge the appliance, power cord or power plug in water or any another liquid.



We recommend rinsing the kettle **A2**, lid **A1** and the frothing attachment **A9** immediately after use. Subsequently, wash the kettle **A2**, lid **A1** and the frothing attachment **A9** in warm water with a small amount of kitchen detergent. Rinse with clean water and thoroughly wipe dry.

Wipe the base **A4** using a soft sponge lightly dampened in warm water and then wipe dry with a clean wiping cloth.

Storage

When not using the appliance for an extended period of time, disconnect the power plug from the power socket, allow the appliance to cool down and clean it according to the instructions provided above.

The frothing attachment **A9** can be placed in the storage compartment **A7** at the bottom of the base **A4**.

Before storing it, check that the appliance and all its accessories are thoroughly clean and dry.

Store the appliance in a dry, clean and well-ventilated location not exposed to extreme temperatures and out of children's reach.

TECHNICAL SPECIFICATIONS

Rated voltage range.....	220 – 240 V~
Rated frequency.....	50/60 Hz
Rated power input.....	550 – 650 W

We reserve the right to change text and technical specifications.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance.

Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details.

In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.