


Model No. DJR183 CORDLESS RECIPRO SAW

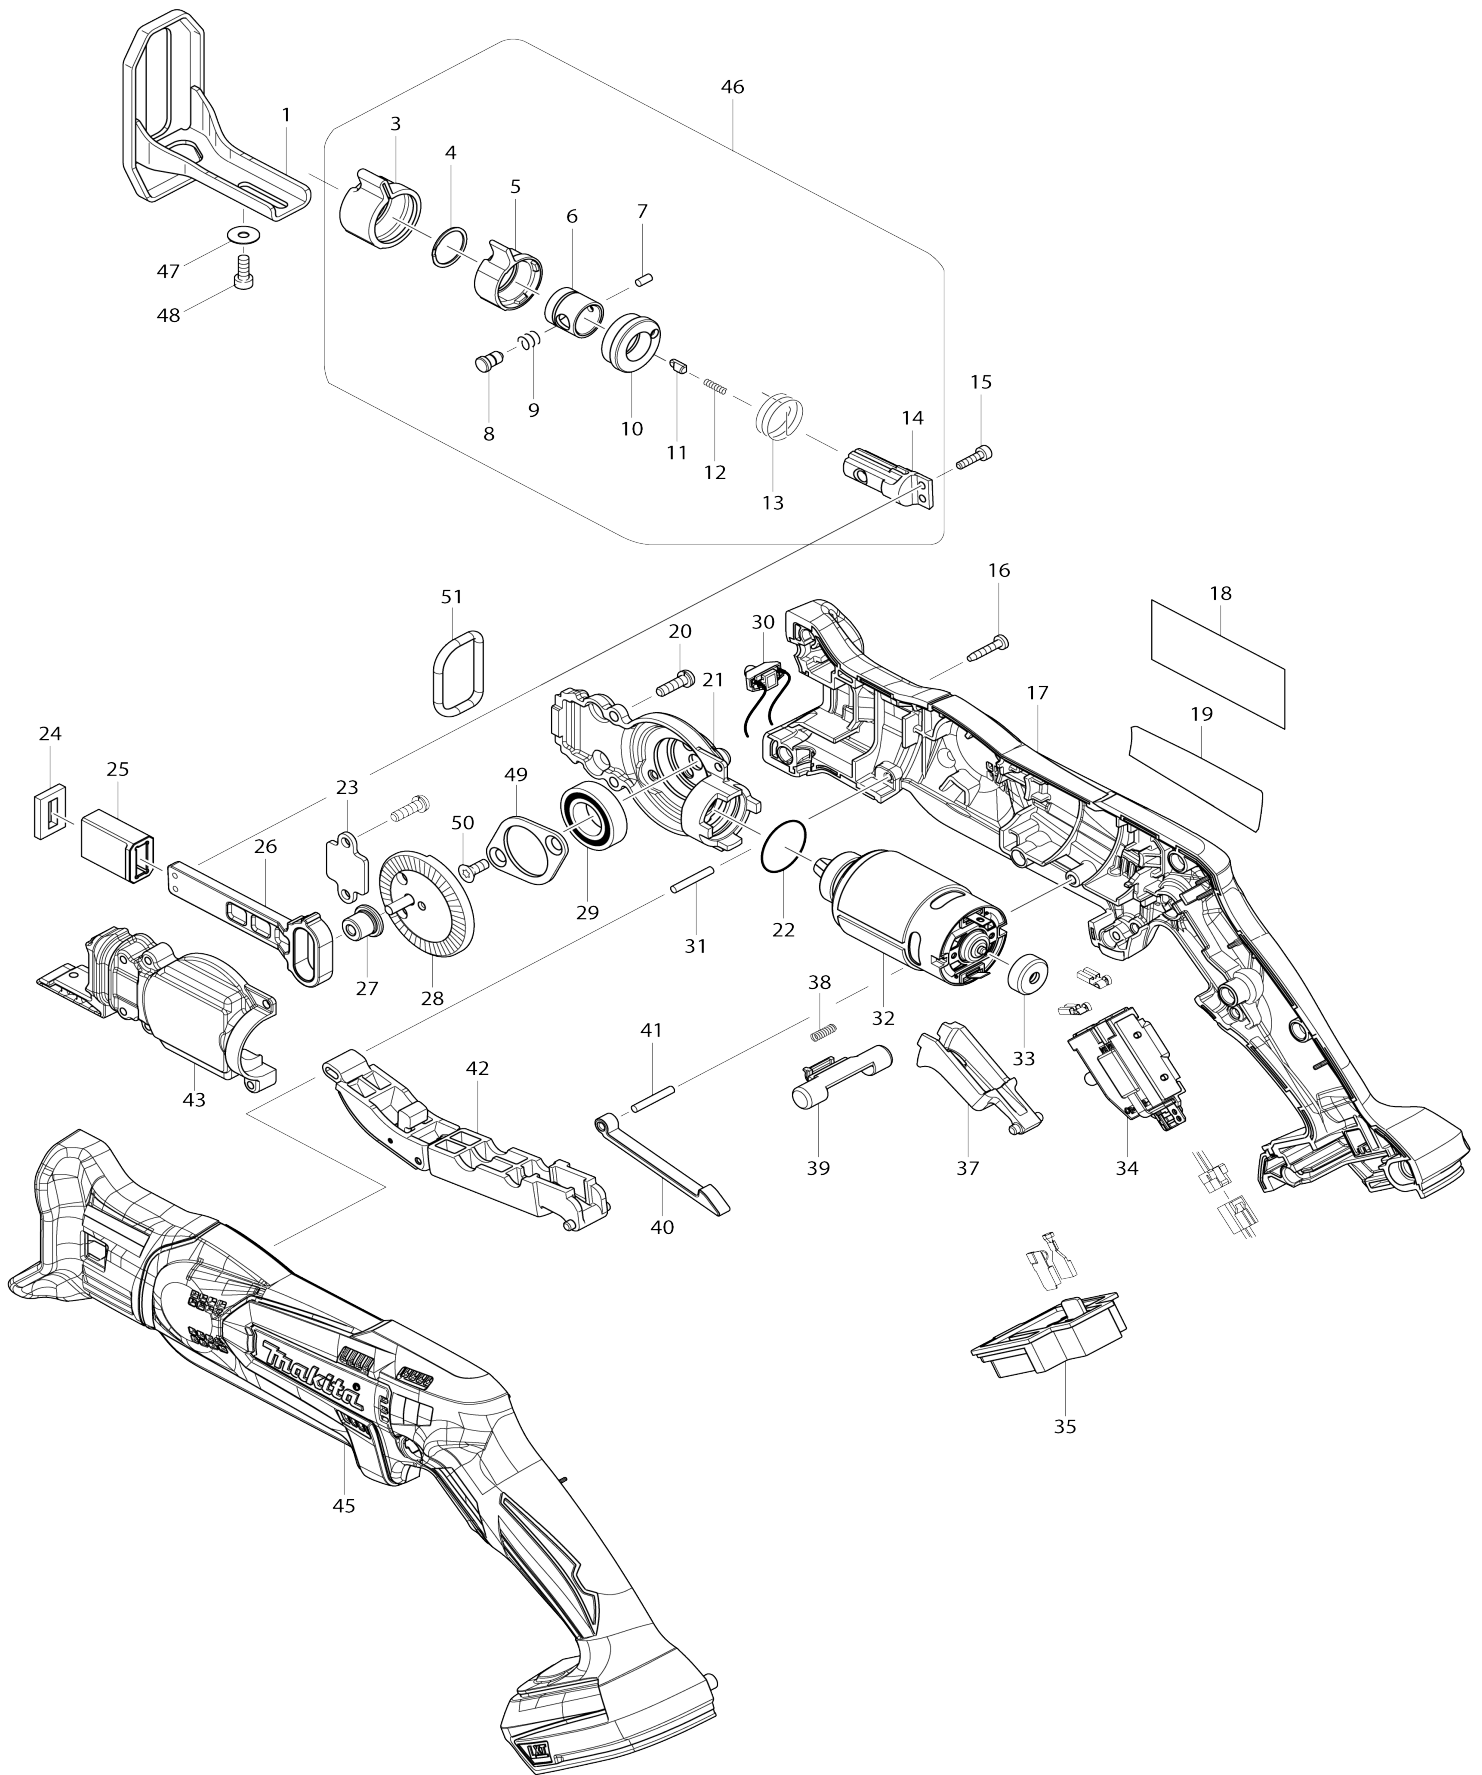

042	141128-6	SWITCH LEVER F COMPLETE		1		
043	319061-2	GEAR HOUSING COVER		1		
045	187760-2	HOUSING SET		1		
C10	263005-3	RUBBER PIN 6		2		
C20	423475-0	SPONGE SHEET		1		
D10		INC. 17				
046	126201-3	BLADE CLAMP ASSEMBLY		1		
D10		INC. 3-14				
047	253874-0	FLAT WASHER 4		1		
048	922112-8	HEX. SOCKET HEAD BOLT M4X10		1		
049	285738-0	BEARING RETAINER 36		1		
050	265035-0	COUNTERSUNK HEAD SCREW M4 X10		2		
051	424597-9	RUBBER RING 23		1		
A01	B-20432	RECIPROSAW BLADE 100MM		1		
A02	B-20404	RECIPROSAW BLADE 100MM		1		
A03	783201-2	HEX. WRENCH 3		1		
F17-3	197606-4	BATTERY BL1830B SET (2PIECES)	O	1	*	
F18-3	197600-6	BATTERY BL1830B SET	O	1		
F19-4	197599-5	BATTERY BL1830B SET	O	1		
A04	***DC18RC	DC18RC FAST CHARGER		1		
A05	196460-3	BATTERY BL1820 SET		2		
A06	450128-8	BATTERY COVER		1		
A07	821586-9	PLASTIC CARRYING CASE		1		
C10	162315-4	LATCH		2		
C20	452137-3	HANDLE		1		
A05	194204-5	BATTERY BL1830 SET		2	*	
A05-1	194204-5	BATTERY BL1830 SET	O	2	*	
A05-2	197600-6	BATTERY BL1830B SET	<	2	*	
A05-3	197600-6	BATTERY BL1830B SET	O	2		
A05	196399-0	BATTERY BL1840 SET		2	*	
A05-1	196399-0	BATTERY BL1840 SET	O	2	*	
A05-2	197265-4	BATTERY BL1840B SET	<	2	*	
A05-3	197265-4	BATTERY BL1840B SET	O	2		
A05-2	197280-8	BATTERY BL1850B SET		2	*	
A05-3	197280-8	BATTERY BL1850B SET	O	2		

Please state Parts No. when your order.

Print Date 05/10/2024