


ДЕТАЛИРОВКА И ЛИСТ ЗАПАСНЫХ ЧАСТЕЙ К ПНЕВМОГАЙКОВЕРТУ FROSP ПГ-116

Version: 10/26/2023

Дата обновления: 4/8/2024

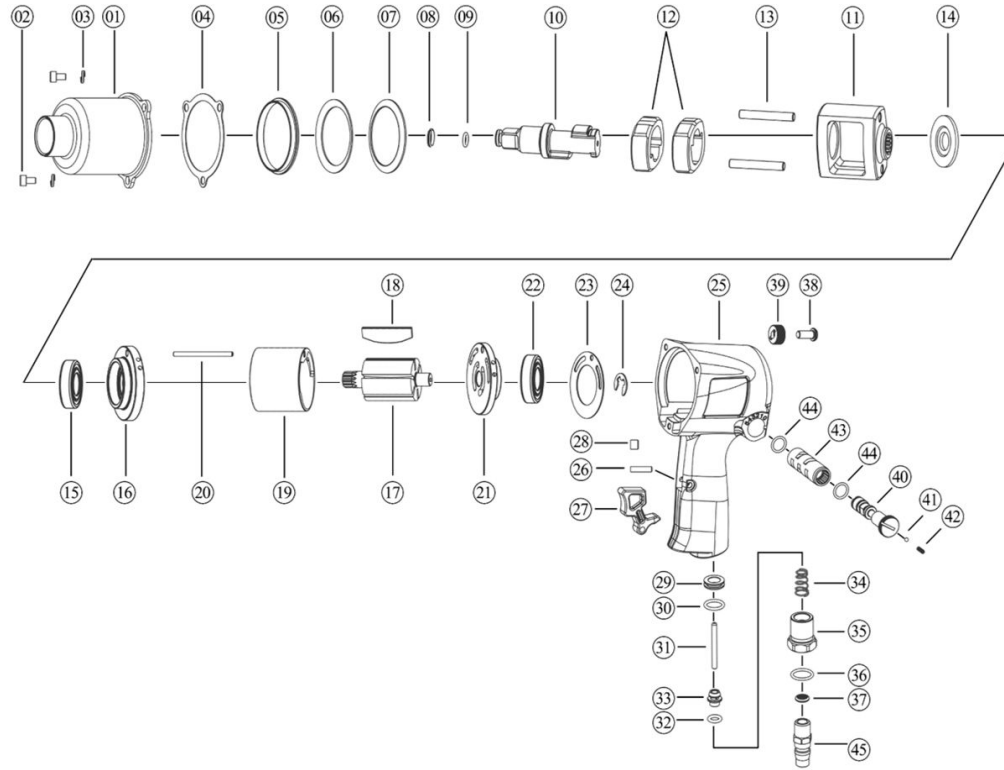

No.	Part name	Qty	Unit Price	No.	Part name	Qty	Unit Price	No.	Part name	Qty	Unit Price	No.	Part name	Qty	Unit Price
1	Front Housing	1		12	Hammer	2		23	Rear Bearing Cover Paper Gasket	1		34	Spring	1	
2	Screw	3		13	Hammer Pin	2		24	Circlip	1		35	Air Inlet	1	
3	Spring Washer	3		14	Hammer Cage Spacer	1		25	Housing	1		36	O-Ring	1	
4	Front Housing Paper Gasket	1		15	Bearing	1		26	Split Pin	1		37	Filter Screen	1	
5	Bushing	1		16	Front Bearing Cover	1		27	Trigger	1		38	Screw	1	
6	Motor Clamp Washer	2		17	Rotor	1		28	Fixed Screw	1		39	Reverse Knob	1	
7	Bushing	1		18	Rotor Blade	6		29	Air Valve Seat	1		40	Reverse Valve	1	
8	Circlip	1		19	Cylinder	1		30	Sealing Ring	1		41	Steel Ball	1	
9	O-Ring	1		20	Cylinder Pin	1		31	Air Valve Pin	1		42	Adjust. Speed Spring	1	
10	Anvil	1		21	Rear Bearing Cover	1		32	Sealing Ring	1		43	Bushing	1	
11	Hammer Cage	1		22	Bearing	1		33	Air Valve	1		44	Sealing Ring	2	
												45	Connector	1	

ALL FOR UNIT PRICE, NEED TIMES QTY.

1/7 Front housing set(bushing need to heated then intall into front housing) ¥ 20

25-43 Can be housing set ¥ 50

8-10 Anvil set(Order anvil already includ. circlip and O-ring)