


ДЕТАЛИРОВКА И ЛИСТ ЗАПАСНЫХ ЧАСТЕЙ К ПНЕВМОГАЙКОВЕРТУ FROSP ПГ-2128

Version: 10/2/2023

Дата обновления: 4/8/2024

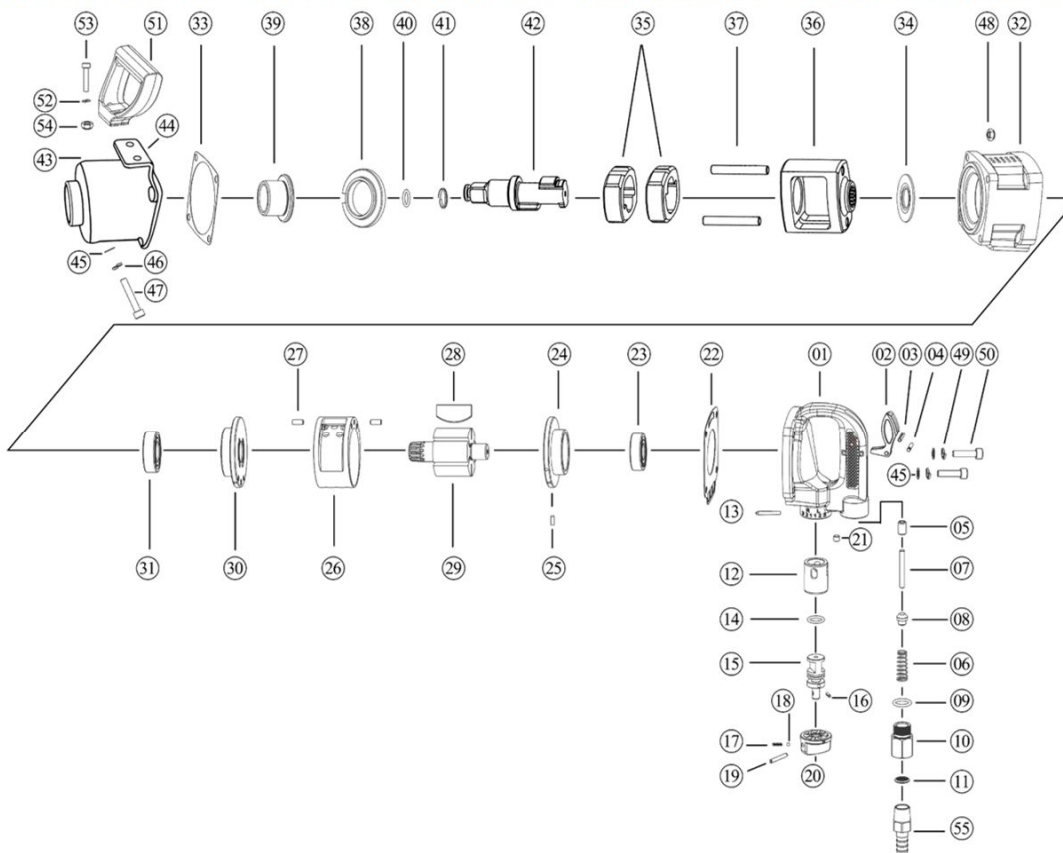

No.	Part name	Qty	Purchase QTY	No.	Part name	Qty	Purchase QTY	No.	Part name	Qty	Purchase QTY	No.	Part name	Qty	Purchase QTY
1	Handle	1		15	Switch Core	1		29	Rotor	1		43	Front Housing(thicken)	1	
2	Trigger	1		16	Split Pin	1		30	Front Bearing Cover	1		44	Holder	1	
3	Split Pin	1		17	Spring	1		31	Bearing	1		45	Washer	8	
4	Pin	1		18	Steel Ball	1		32	Housing	1		46	Spring Washer	4	
5	Inverse Copper Sleeve	1		19	Spring Pin	1		33	Front Sealing	1		47	Screw	4	
6	Air Inlet Spring	1		20	Rotary Controller	1		34	Spacer	1		48	Hex Nut	4	
7	Pin	1		21	Cap	1		35	Hammer(thicken)	2		49	Spring Washer	4	
8	Air Valve	1		22	Rear Sealing	1		36	Hammer Pin(thicken)	2		50	Screw	4	
9	O-Ring	1		23	Bearing	1		37	Hammer Cage(thicken)	1		51	D-Handle	1	
10	Air Inlet	1		24	Rear Cylinder Cap	1		38	Washer	1		52	Spring Washer	2	
11	Filter	1		25	Split Pin	1		39	Anvil Sleeve(thicken)	1		53	Screw	2	
12	Valve Sleeve	1		26	Cylinder	1		40	O-Ring	1		54	Hex Nut	2	
13	Split Pin	1		27	Split Pin	2		41	Circlip	1		55	Connector	1	
14	O-Ring	1		28	Rotor Blade	6		42	Anvil	1					

ALL FOR UNIT PRICE, NEED TIMES QTY.