


ДЕТАЛИРОВКА И ЛИСТ ЗАПАСНЫХ ЧАСТЕЙ К ПНЕВМОГАЙКОВЕРТУ FROSP ПГ-352

Version: 10/28/2023

Дата обновления: 4/8/2024

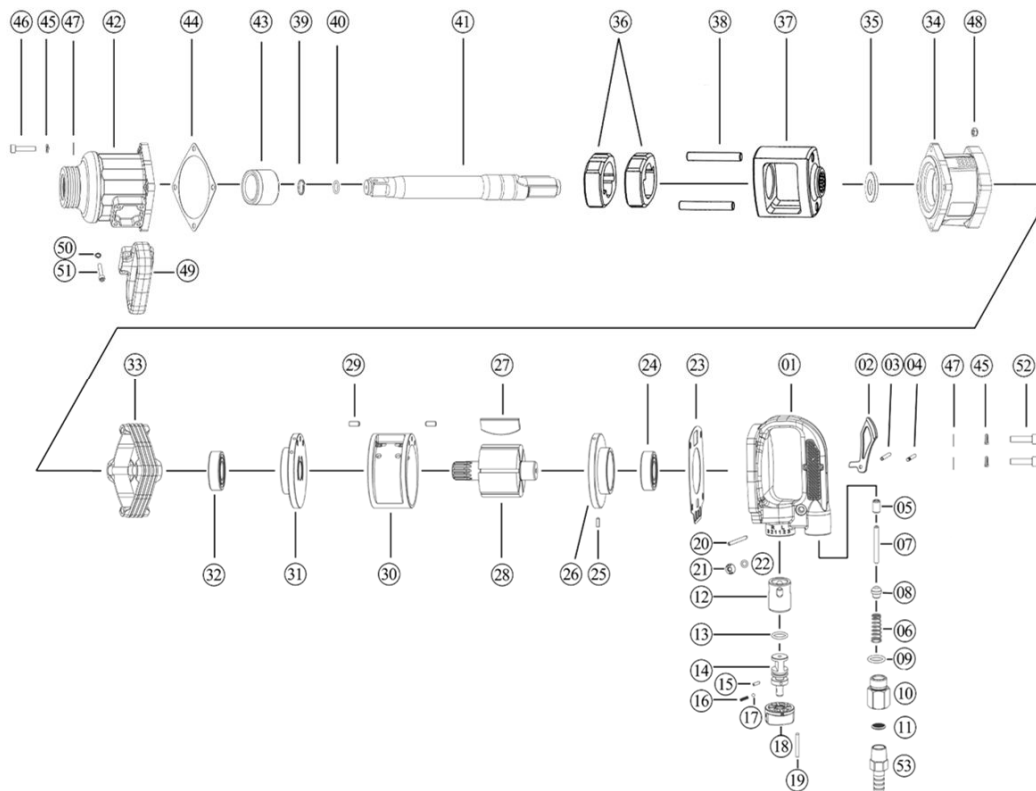

No.	Part name	Qty	Purchase QTY	No.	Part name	Qty	Purchase QTY	No.	Part name	Qty	Purchase QTY	No.	Part name	Qty	Purchase QTY
1	Handle	1		15	Split Pin	1		29	Split Pin	2		42	Front Housing	1	
2	Trigger	1		16	Spring	1		30	Cylinder	1		43	Bearing	1	
3	Split Pin	1		17	Steel Ball	1		31	Front Cylinder Cap	1		44	Front Sealing	1	
4	Pin	1		18	Rotary Controller	1		32	Bearing	1		45	Spring Washer	8	
5	Inverse Copper Sleeve	1		19	Split Pin	1		33	Protect Cover	1		46	Screw	4	
6	Air Inlet Spring	1		20	Split Pin	1		34	Housing	1		47	Gasket	8	
7	Pin	1		21	Screw	1		35	Bearing	1		48	Nut	4	
8	Air Valve	1		22	O-Ring	1		36	Hammer	2		49	D-Handle	1	
9	O-Ring	1		23	Rear Sealing	1		37	Hammer Cage	1		50	Spring Washer	4	
10	Air Inlet	1		24	Bearing	1		38	Hammer Pin	2		51	Screw	4	
11	Filter Screen	1		25	Rear Cylinder Cap	1		39	Circlip	1		52	Screw	4	
12	Valve Sleeve	1		26	Split Pin	1		40	O-Ring	1		53	Connector	1	
13	O-Ring	1		27	Rotor Blade	6		41	Anvil	1					
14	Switch Core	1		28	Rotor	1									

ALL FOR UNIT PRICE, NEED TIMES QTY.