


# Детализировка и лист запасных частей FROSP RK-128-V5

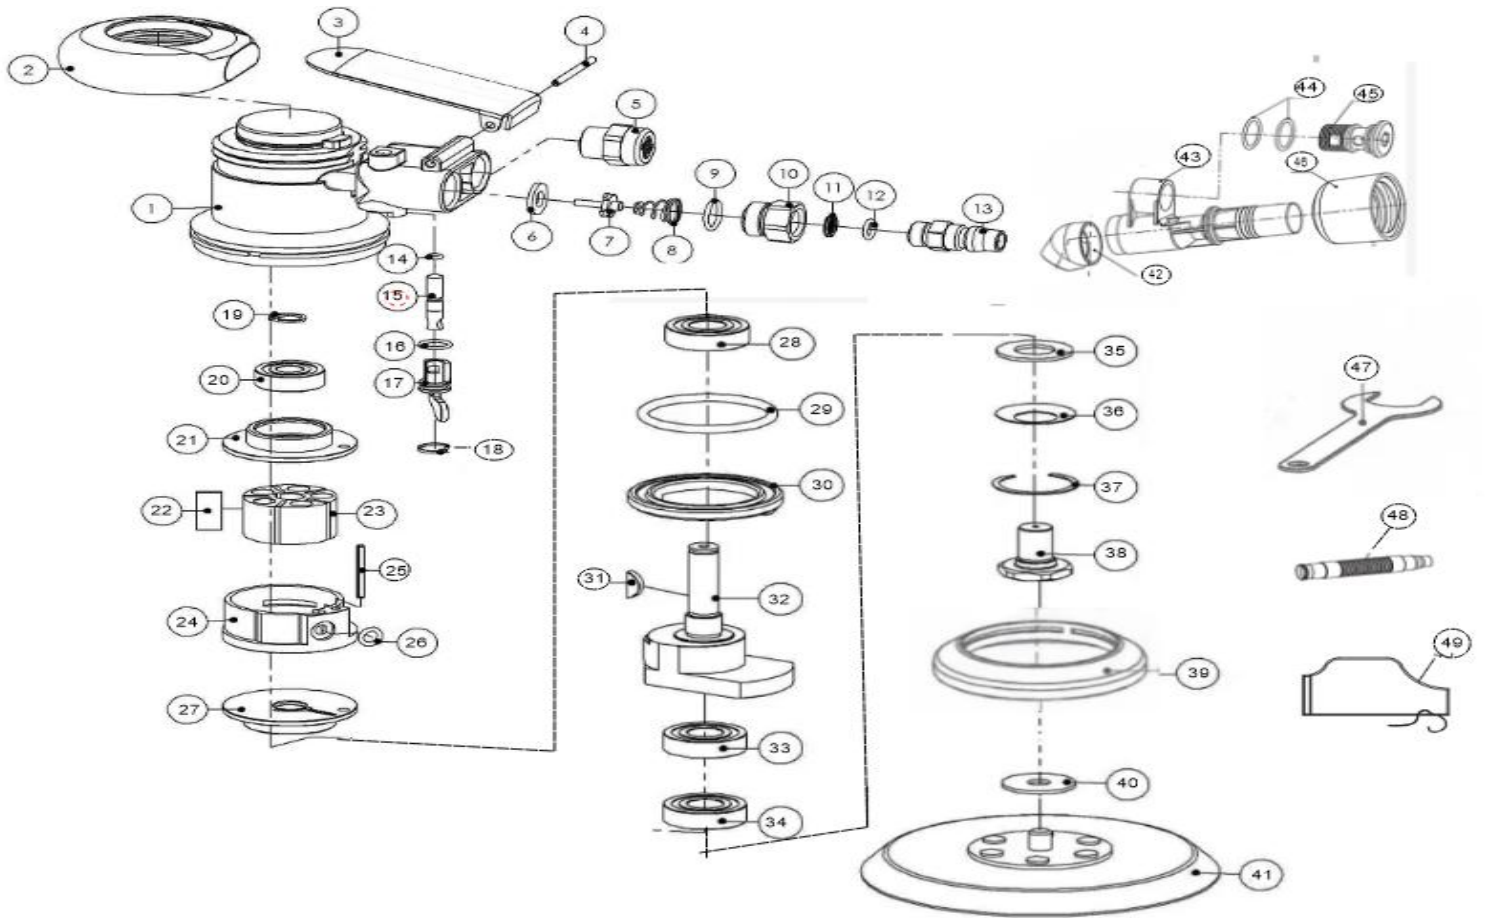

No.	Description	No.	Description	No.	Description	No.	Description
1	Housing	14	O- ring6X1.5	27	Cylinder front plate	40	Shim
2	Housing sheath	15	Switch pole	28	Bearing	41	sanding pad
3	Trigger	16	O- ring10X1.5	29	O-ring 46 X 3.1	42	vacuuming bend pipe
4	pin 3X40	17	Adjust knob	30	Lock ring	43	vacuuming straight pipe
5	muffler Joint	18	Retainer ring 12	31	Semicircular key	44	O- ring15X1.8
6	Switch plug	19	Retainer ring 10	32	Anvil	45	vacuuming joint
7	Reverse pin	20	bearing	33	bearing	46	locked pipe
8	spring	21	Cylinder end plate	34	bearing	47	Wrench
9	O- ring 12.5X1.8	22	Rotor blade	35	Felt	48	Vacuum tube
10	Air inlet connection	23	Rotor	36	Dust proof mat	49	Dust collection bag
11	Muffler washer	24	Cylinder	37	Retainer ring	50	
12	O- ring 7.1X1.8	25	Pin3X 28	38	Main shaft	51	
13	Joint	26	O-ring 10 X 1.8	39	protective shield	52	