


# Детализировка и лист запасных частей FROSP F5040

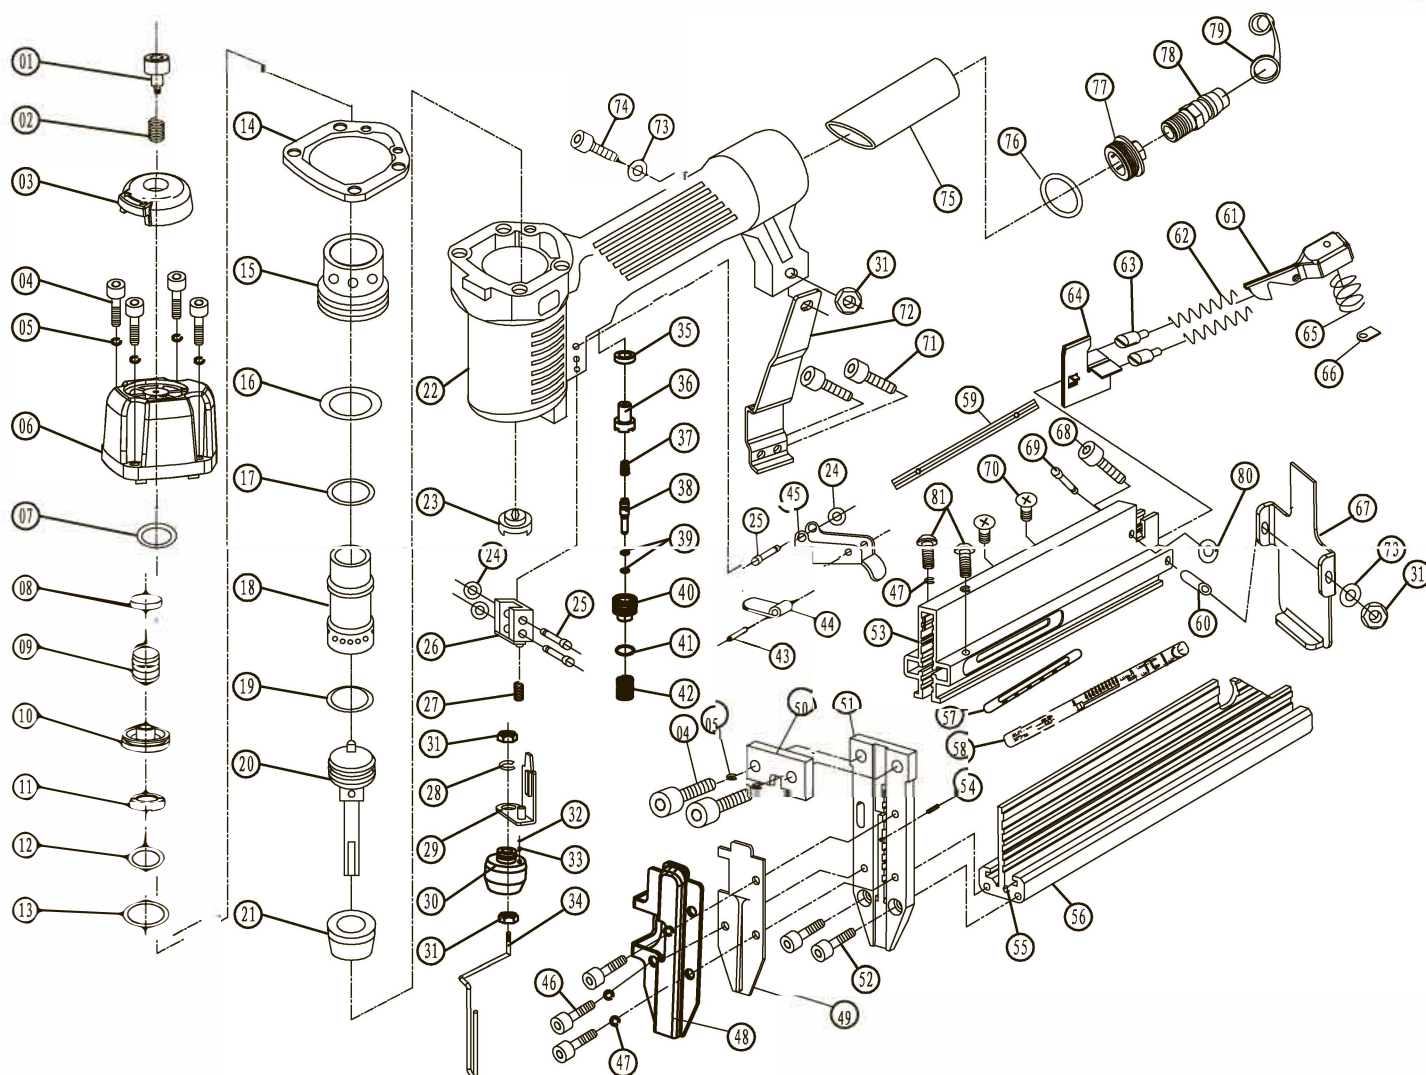

No	Description	No	Description	No	Description	No	Description
1	Screws	22	Gun body	43	pin 2.5*16	64	head
2	spring	23	Rubber mat	44	Safety damper	65	Compression spring
3	Air commutator	24	O-ring 1.7*2	45	trigger	66	gasket
4	Screw M5*20	25	pin	46	Screw M4 x 10	67	Locating seat
5	Spring washer 5	26	Slide rack	47	Spring washer 4	68	Screw M4*38
6	Cylinder cap	27	spring	48	Safety cover	69	pin
7	O-ring 13.7*2.4	28	ring 6	49	Cover plate	70	head screw M4*6
8	Seal washer	29	Guide frame assembly	50	Backing plate	71	Screw M4 x 6
9	spring	30	nut	51	nailhead	72	Fixed seat
10	Balance valve	31	nut M4	52	Screw M4 x 14	73	Flat washer 4
11	Cushion gasket	32	spring	53	Movable magazine	74	Screw M4 x 20
12	O-ring 31.2*2.5	33	Ball DW=2	54	pin 1.5*10	75	Gun handle sheath
13	O-ring 24.8*3.5	34	Safety nose	55	slug	76	O-ring 36.3*3.55
14	Sealing gasket	35	Rectangular washer	56	Fixed magazine	77	End cover
15	ring	36	Valve bush	57		78	Pipe joint
16	O-ring 41.7*3	37	Switch lever pressure spring	58		79	
17	O-ring 26.2*2.4	38	Switch lever	59	Clamping strip	80	O-ring 2.4*1.6
18	cylinder	39	O-ring 2.5*1.5	60		81	Screw M4 x 14
19	O-ring 21.3*3	40	Switch seat	61	Locating pin		
20	Piston assembly	41	O-ring 11.2*2	62	spring		
21	cushion	42	spring	63	putter		