


# ДЕТАЛИРОВКА И ЛИСТ ЗАПАСНЫХ ЧАСТЕЙ К ПНЕВМОГАЙКОВЕРТУ FROSP ПГ-218

Version: 9/14/2022

Дата обновления: 4/8/2024

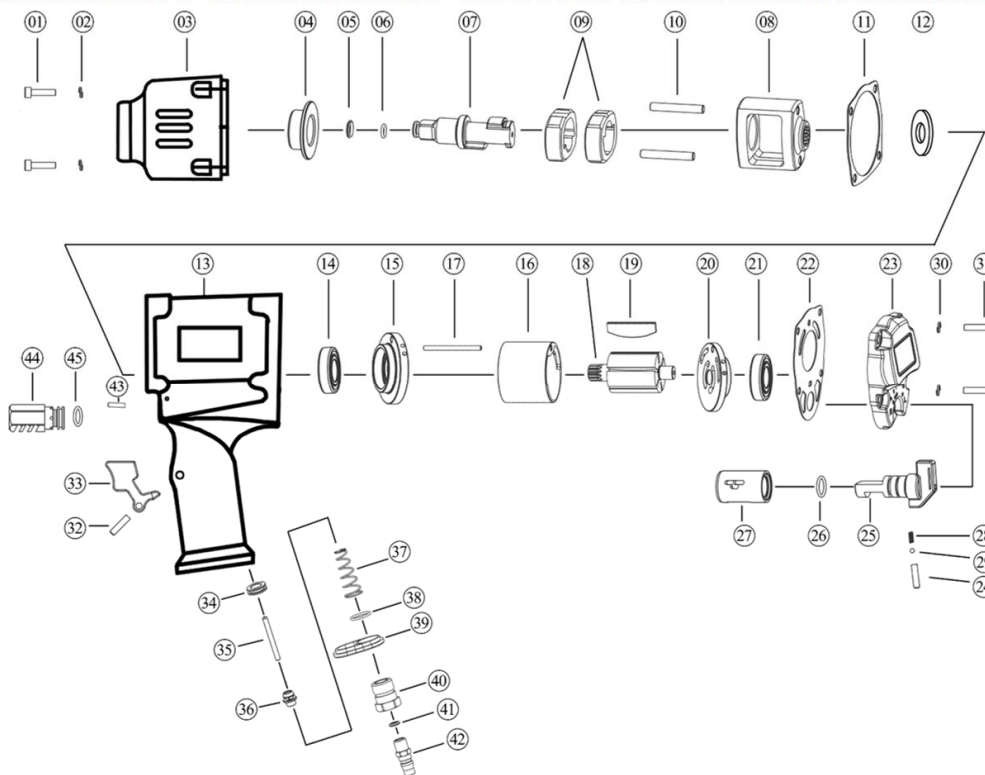

No.	Part name	Qty	Unit Price	No.	Part name	Qty	Unit Price	No.	Part name	Qty	Unit Price	No.	Part name	Qty	Unit Price
1	Screw	4		13	Housing	1		25	Rotary Controller	1		37	Spring	1	
2	Spring Washer	4		14	Bearing	1		26	O-Ring	1		38	O-Ring	1	
3	Front Housing	1		15	Front Bearing Cover	1		27	Inverse Copper Sleeve	1		39	Exhaust Cap	1	
4	Anvil Sleeve	1		16	Cylinder	1		28	Spring	1		40	Air Inlet	1	
5	O-Ring	1		17	Cylinder Pin	1		29	Steel Ball	1		41	Filter Screen	1	
6	Circlip	1		18	Rotor	1		30	Spring Washer	4		42	Connector	1	
7	Anvil	1		19	Rotor Blade	6		31	Screw	4		43	Split Pin	1	
8	Hammer Cage	1		20	Rear Bearing Cover	1		32	Split Pin	1		44	Muffler	1	
9	Hammer	2		21	Bearing	1		33	Trigger	1		45	O-Ring	1	
10	Hammer Pin	2		22	Rear Sealing	1		34	Throttle Valve Seat	1					
11	Front Sealing	1		23	Rear Cover	1		35	Pin	1					
12	Front Spacer	1		24	Pin	1		36	Valve Stem	1					

ALL FOR UNIT PRICE, NEED TIMES QTY.

5-7 Anvil set(Order anvil already includ. circlip and O-ring)

3/4 Front housing set(bushing need to heated then intall into front housing)