Mi Home Security Camera Quick Start

Mi 360° Home Security Camera 2K Pro
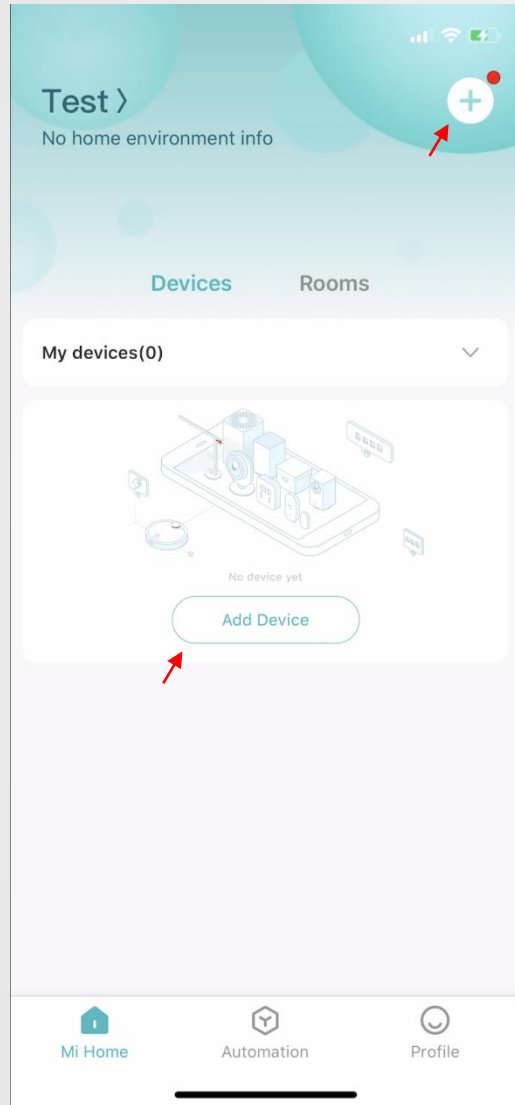
1. Download Mi Home APP

- Option 1

  – For Android users: download "MiHome"

    from Google Play Store.

  – For iOS users: download "MiHome" from

    App Store.

- Option 2

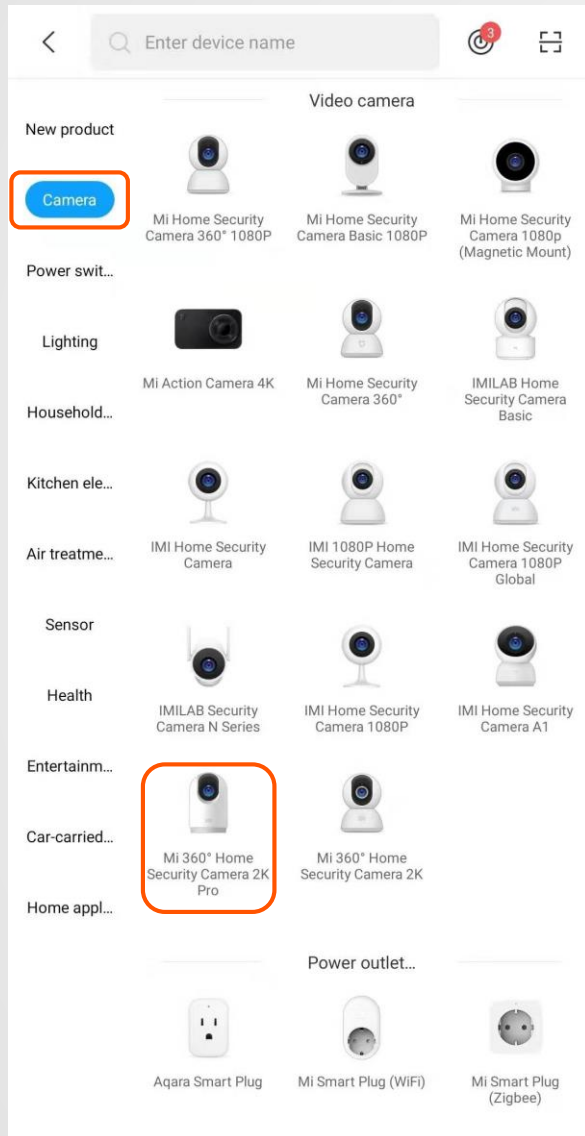 – Scan the QR code to download and install
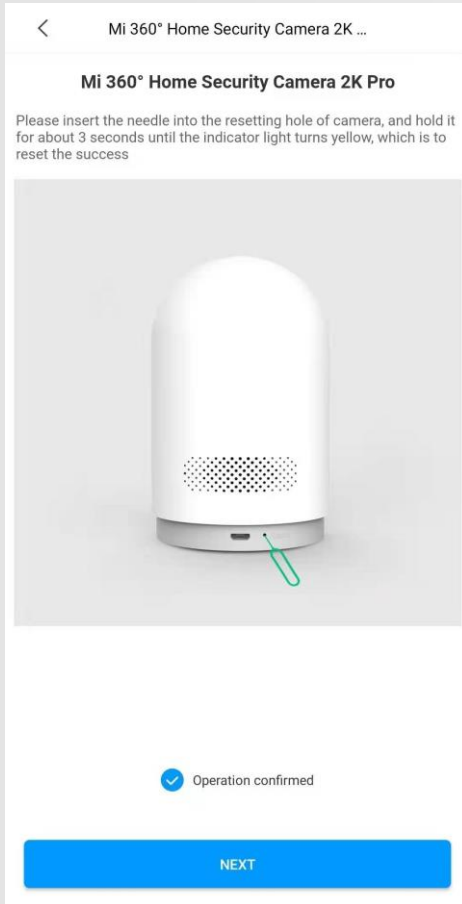
    MiHome app.

2. Add Devices

- Make sure the smartphone is connected to a 2.4GHz WiFi network.

- Open MiHome APP, tap button "Add Device" or icon "+" on the upper right, and follow instructions to add devices.
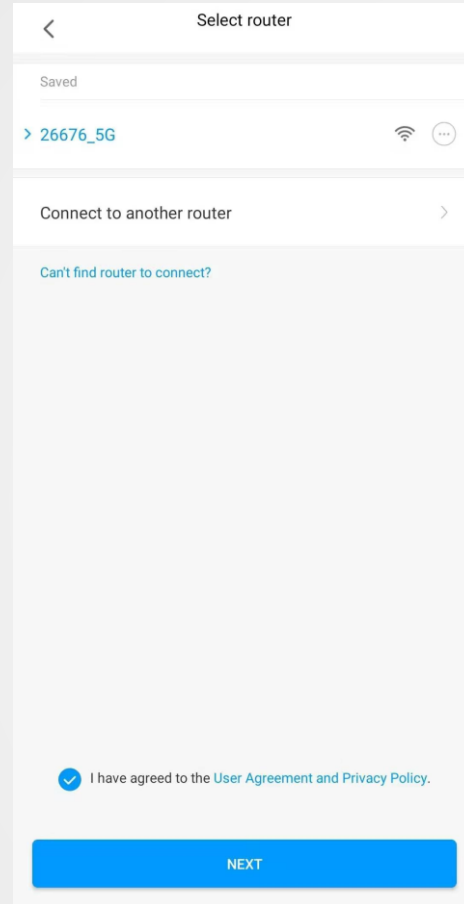
3. Search Mi Home Security Camera

- Go to "Camera" category

- Select the "Mi 360° Home Security Camera 2K Pro" to add
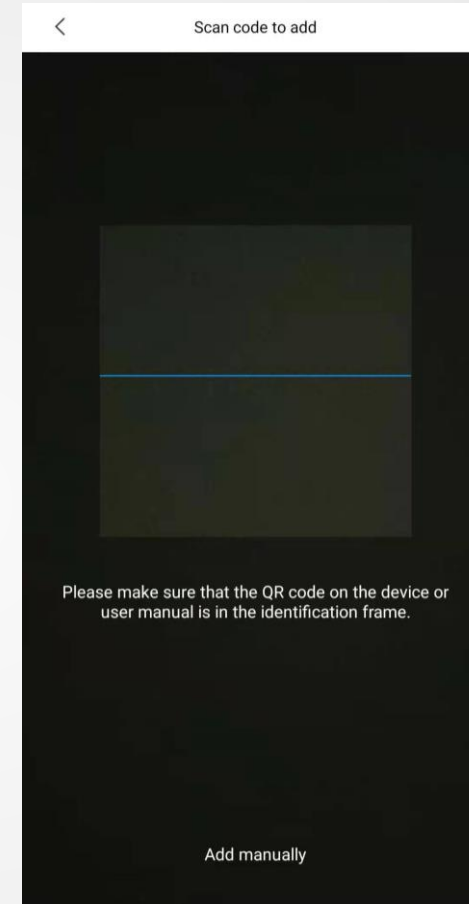
4. Connect the Camera to Network

I. Follow the instructions to reset camera.

The new product doesn't need to reset for connection.

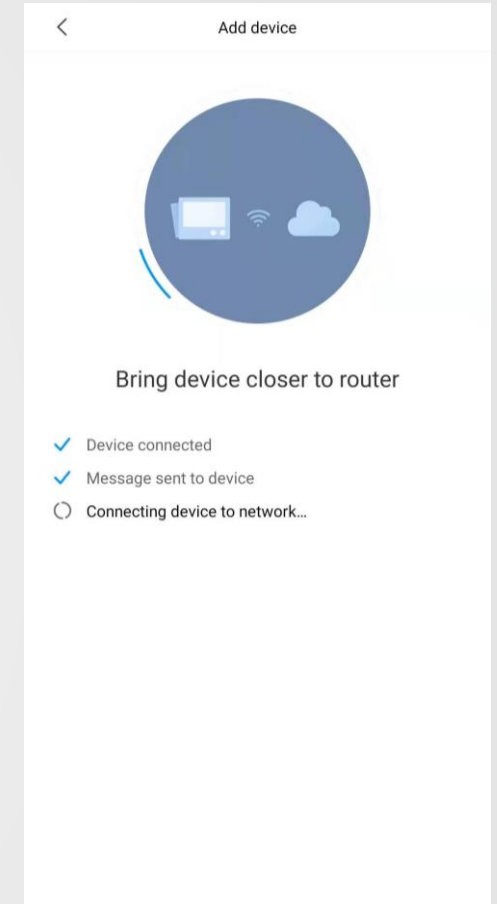
II. Select Wi-Fi network to connect camera.
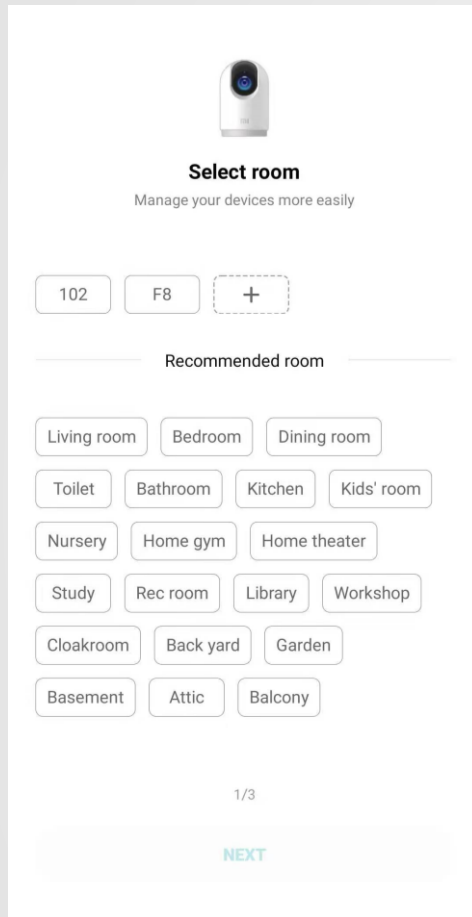
Support both 2.4GHz and 5GHz Wi-Fi.

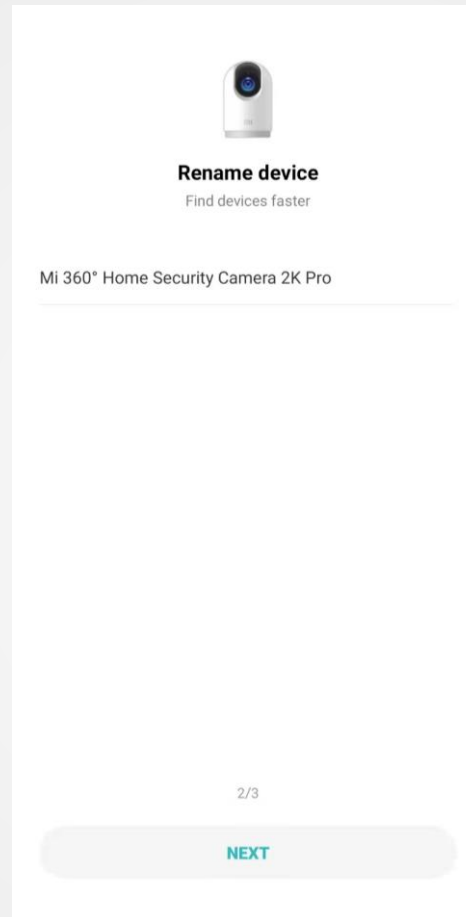

III. Scan the QR code on the bottom of the device to add.

IV. Wait until connection completed.
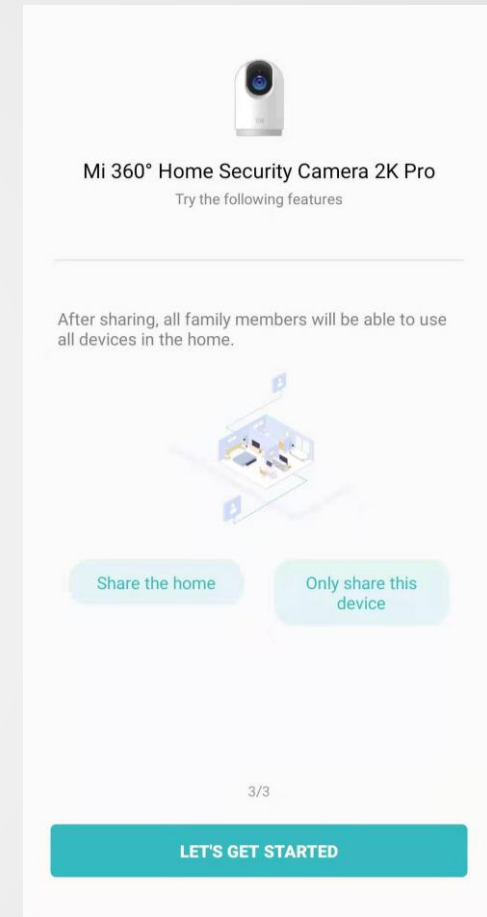
Connect the Camera to Network

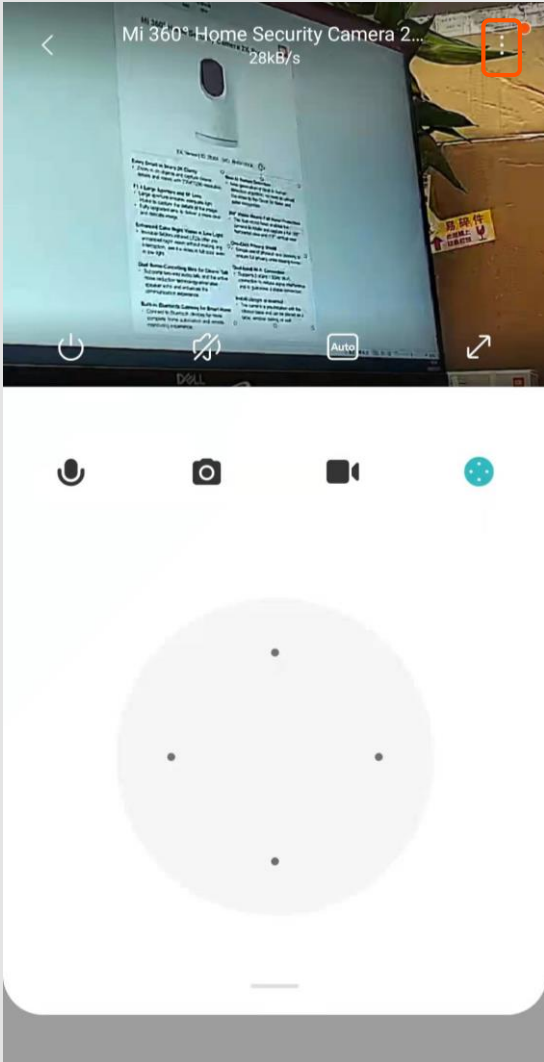V.   Select room for the camera.

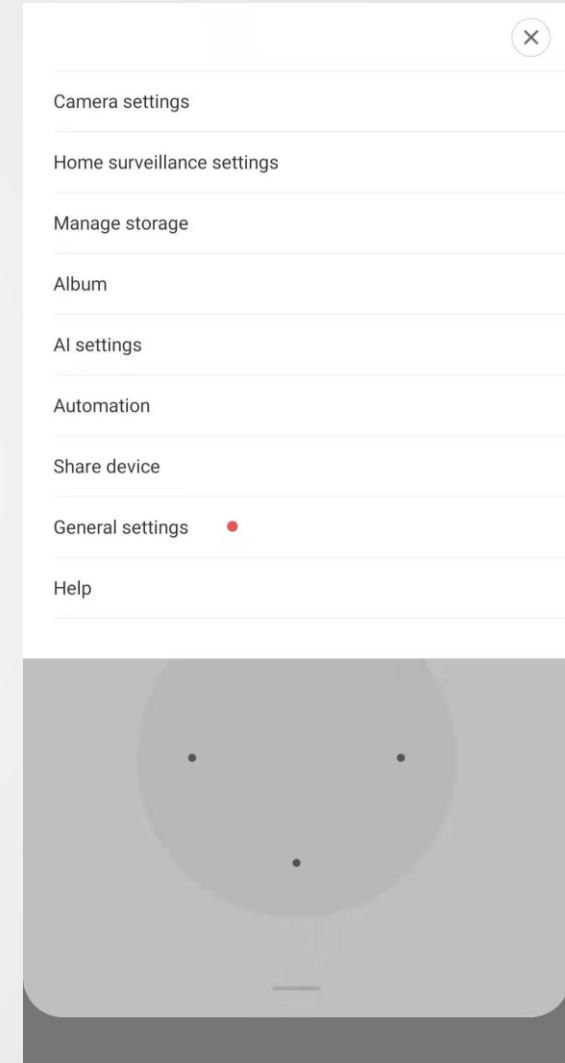VI.   Rename the camera.

VII.   Share with friends or family (optional). Complete all adding steps.
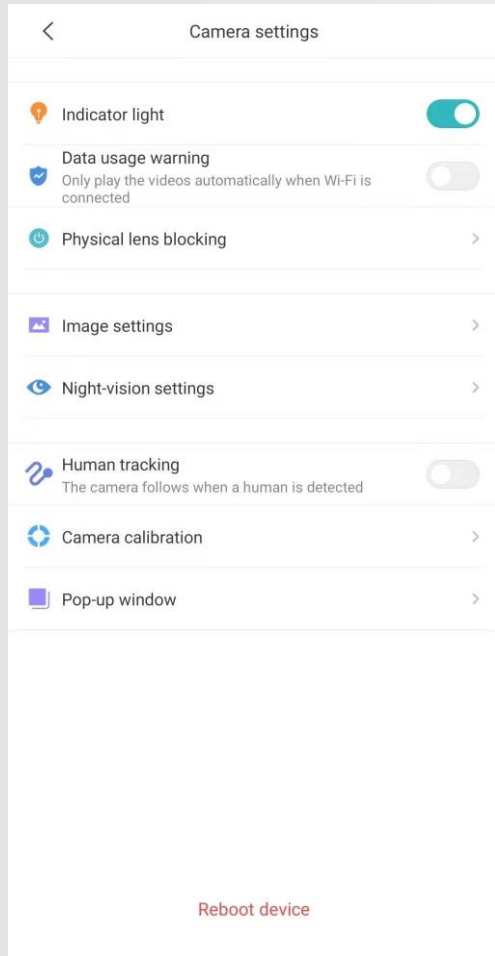
5. Settings

Tap icon on the upper right for camera settings.
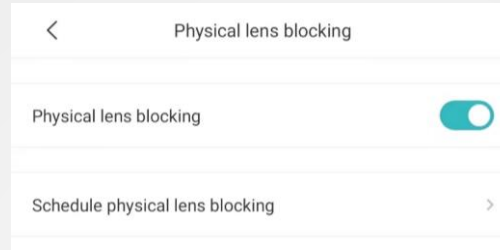
Here you can set up all the camera functions, such as image settings, home surveillance schedule, automation, updates, etc.
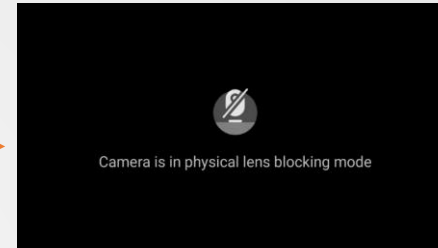
Camera settings

Home surveillance settings

Manage storage

Album

AI settings

Automation

Share device

General settings

Help

Settings – Camera Settings

Camera settings screen:
- Indicator light (on)
- Data usage warning — Only play the videos automatically when Wi-Fi is connected (off)
- Physical lens blocking
- Image settings
- Night-vision settings
- Human tracking — The camera follows when a human is detected (off)
- Camera calibration
- Pop-up window
- Reboot device

Physical lens blocking →

Physical lens blocking screen:
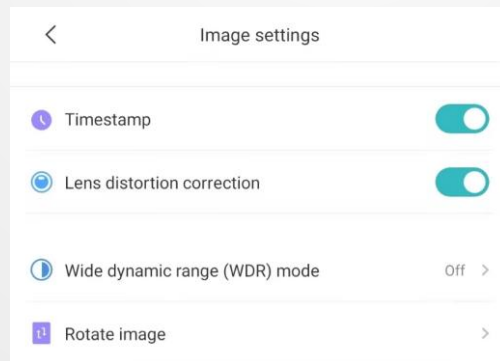- Physical lens blocking (on)
- Schedule physical lens blocking

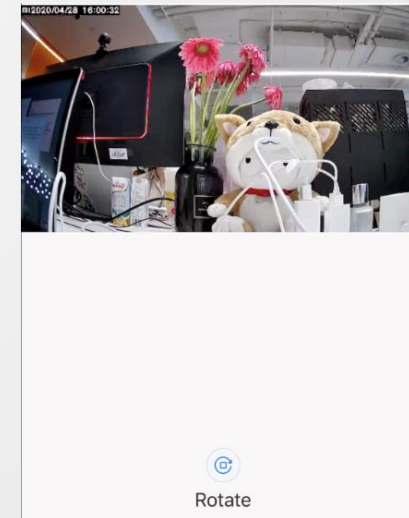Once you set this function or turn off the camera, the lens will turn inside of the cover to protect your privacy.

Camera is in physical lens blocking mode

In this Mode, camera will show none of images to protect your privacy.

Image Settings →

Image settings screen:
- Timestamp (on)
- Lens distortion correction (on)
- Wide dynamic range (WDR) mode — Off
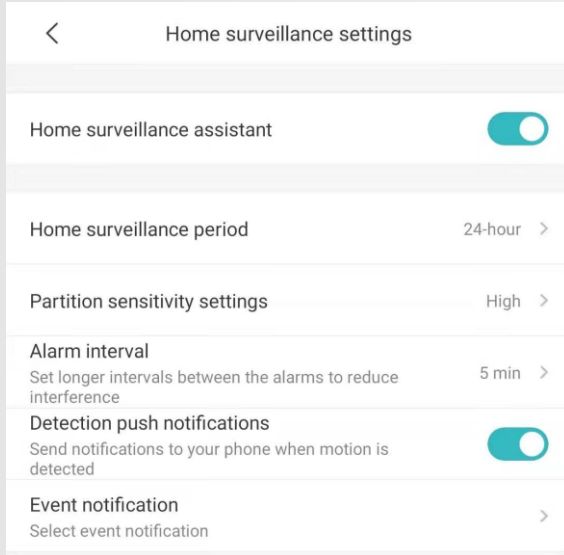- Rotate image

Set proper image rotation for different installation mode
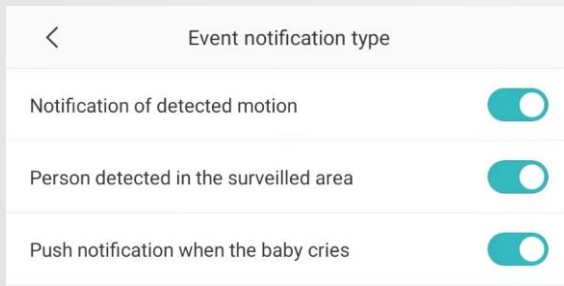

Rotate

No matter the camera is flat mounted or ceiling mounted, image would be rotated properly.
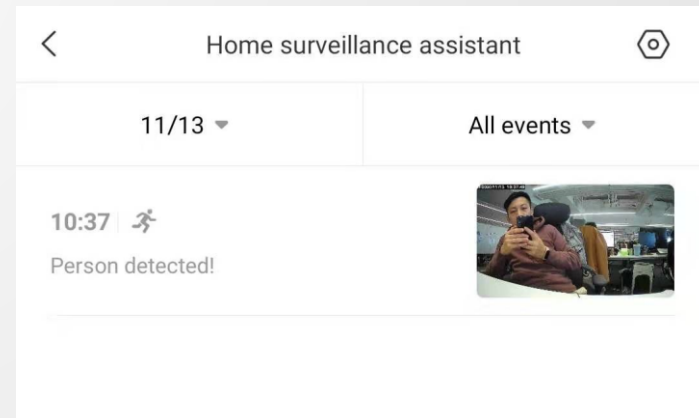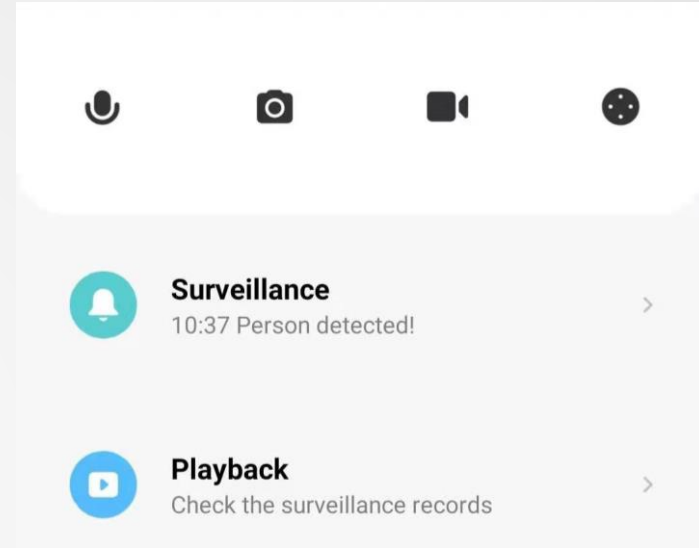
Settings – Home Surveillance
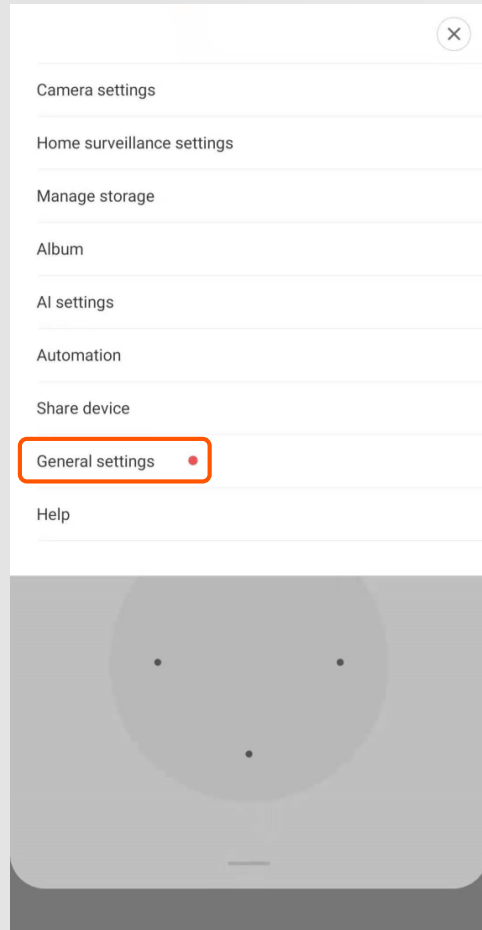

Enable Home Surveillance for motion detection.
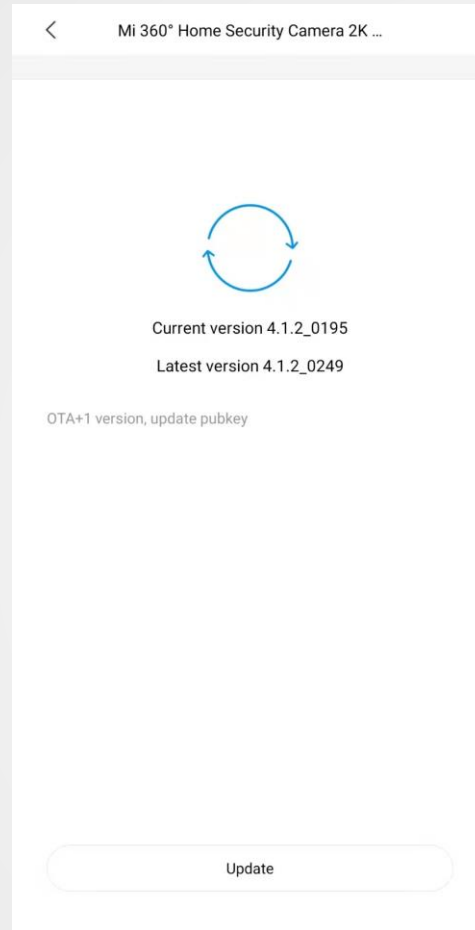
Choose event notification type you need.
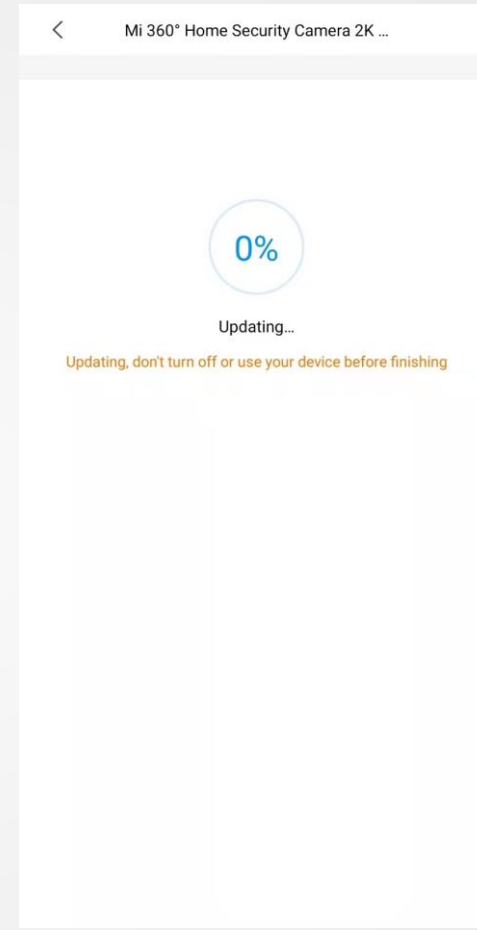
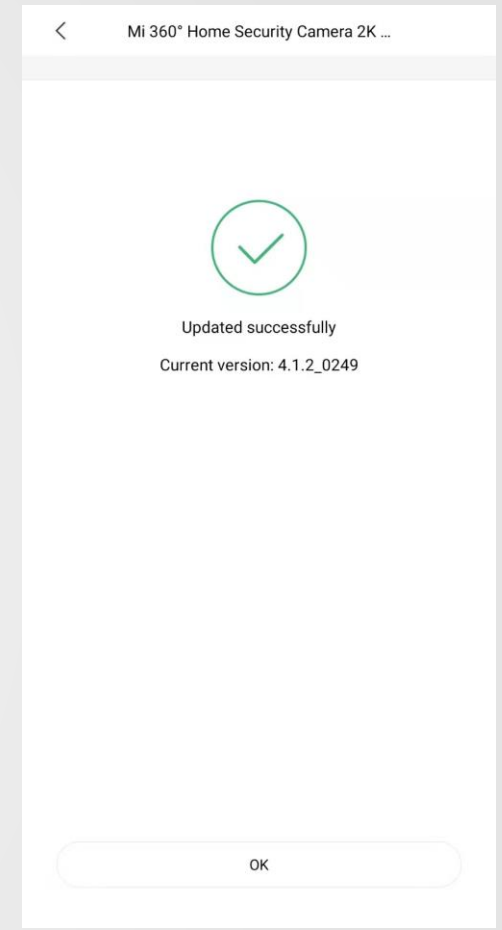Event Logs

Settings – Updates

I. When there is any updates, it will show a red dot on the button.

II. Tap "Update" to confirm the action.

III. Wait for the update and installation completed. Keep the network connected.

IV. Finish the update.